



How to connect a SATAHDD power supply

1. Power supply from BWB CN5

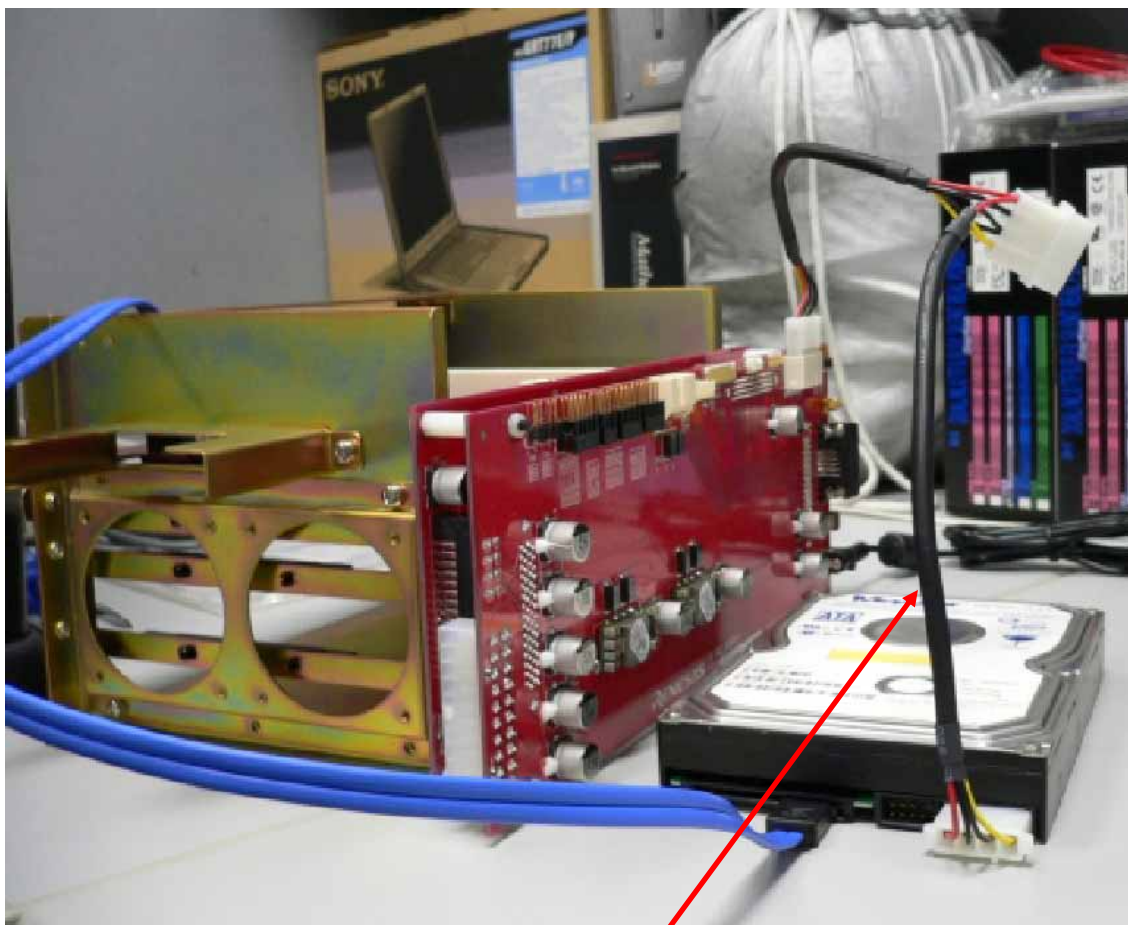

DC POWER CABLE FOR SATA_HDD



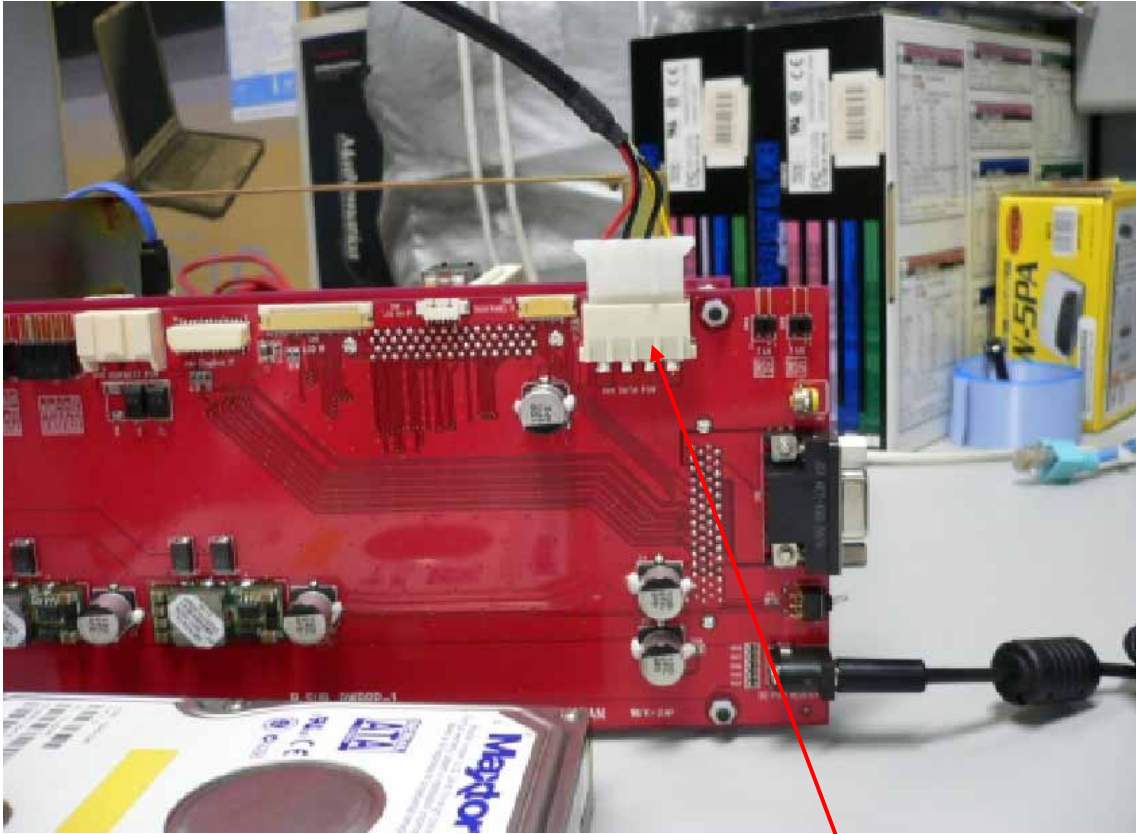

BWB CN5

Power Supply Cable



2. . Power supply from ATX POWER

